

Link do produktu: <https://www.gotronik.pl/profesjonalna-myjka-ultradzwiekowa-metalowa-obudowa-zx-080t-22l-p-10500.html>



Profesjonalna myjka ultradźwiękowa metalowa obudowa ZX-080T 22L

Cena brutto	1 099,00 zł
Cena netto	893,50 zł
Cena poprzednia	1 250,00 zł
Czas wysyłki	24 godziny
Numer katalogowy	ZX-080T
Kod producenta	ZX-080T
Kod EAN	5905567118838
Producent	Skymen

Opis produktu

Myjka ultradźwiękowa metalowa obudowa ZX-080T 22L Skymen




Profesjonalna myjka ultradźwiękowa ZX-080T wykonany w całości ze stali nierdzewnej SUS304. Myjka o pojemności 22L oraz wymiarach zbiornika 500 x 300 x 150mm. Urządzenie posiada regulację czasu pracy od 0 do 30minut z regulacją co 1s. Możliwość podgrzewania płynu oraz jego odgazowywania pozwala na poprawienie warunków zachodzenia zjawiska kawitacji przez co urządzenie jest bardziej wydajne. Urządzenie o dużej mocy myjącej 480W przy pracy ciągłej oraz 240W przy pracy półfalowej zapewnia możliwość dostosowania warunków pracy do mytego przedmiotu. Myjki ultradźwiękowe to urządzenia, które wykorzystują zjawisko kawitacji do dokładnego i skutecznego czyszczenia różnorodnych obiektów. Woda lub specjalne roztwory czyszczące poddawane są drganiom ultradźwiękowym wytwarzanym przez przetworniki piezoelektryczne. Dzięki zjawisku kawitacji, czyli powstawania i pękaniu pęcherzyków próżniowych w cieczy, myjki ultradźwiękowe są w stanie usunąć brud z powierzchni, nawet w trudnych do czyszczenia narożnikach. Myjka przeznaczona do zastosowań profesjonalny. idealnie nadaje się w dziedzinach związanych z produkcją oraz serwisem sprzętu.

Przetwornik piezoelektryczny o częstotliwości pracy 40kHz oraz mocy 480W skutecznie usuwa brud i czyści elementy



Funkcja automatycznego podgrzewania poprawia wydajność myjki oraz warunki zachodzenia kawitacji. Automatyczny system sterowania reguluje temperaturę oraz odlicza ustawiony czas pracy urządzenia. Dodatkowo myjka posiada funkcję odgazowywania płynu. Funkcja dokładnego mycia pozwala na usunięcie bardzo uporczywego brudu.

o skomplikowanym kształcie.

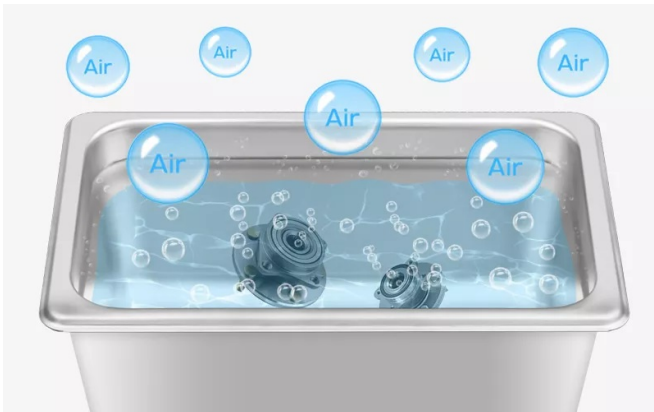


Myjka ultradźwiękowa wykonana w całości ze stali nierdzewnej SUS304. Przeznaczona do użytku profesjonalnego.

Panel sterowania jest prosty i łatwy w obsłudze. Wszystkie niezbędne informacje są sygnalizowane wyświetlaczami oraz diodami LED.



Myjka ta posiada funkcję półfalową w celu zmniejszenia mocy z 480W do 240W. Funkcja nadaje się do zastosowania przy czyszczeniu delikatnych przedmiotów.

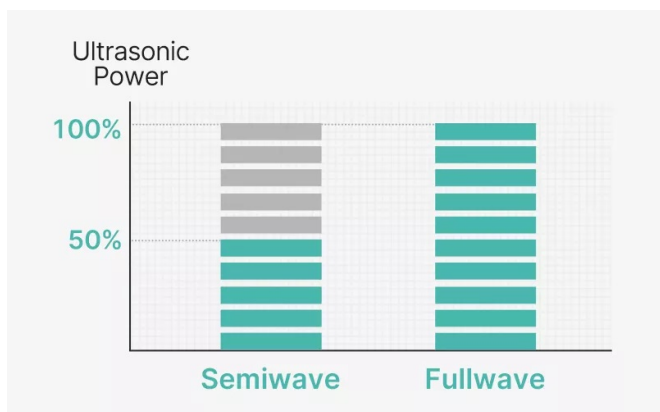

Cała myjka została wykonana ze stali nierdzewnej oraz wyposażona w uchwyty do przenoszenia. Dodatkowo zastosowano gumowe nóżki izolujące urządzenie od powierzchni stołu roboczego. Myjka wyposażona jest w zawór umożliwiający spuszczenie płynu z urządzenia.



Zbiornik o pojemności 30l wyposażony jest w kosz na gumowych nóżkach. Idealnie sprawdzi się przy czyszczeniu drobnych elementów, biżuterii oraz płytek PCB.


Co to jest DeGas?

Funkcja odgazowywania (usunięcie pęcherzyków) to szybsze i skuteczniejsze odgazowanie, które obniża napięcie powierzchniowe, dzięki czemu lepiej przylega do powierzchni czyszczonego przedmiotu i poprawia skuteczność czyszczenia. Po włączeniu bąbelki znikają w ciągu 30 sekund, co znacznie poprawia efekt czyszczenia.

Parametry techniczne

- producent: Skymen
- **model: ZX-080T**
- kolor: srebrny (myjka metalowa)
- obudowa, pokrywa, zbiornik, miska myjki wykonana ze stali nierdzewnej SUS304
- akcesoria (koszyk) wykonane również ze stali nierdzewnej SUS304
- **pojemność misy myjki: 22L = 22000ml**
- 7 ustawień timera cyfrowego: 0 - 30minut
- **moc ultradźwięków: 480W/240W**
- moc podgrzewania: 500W

- czyszczenie ultradźwiękowe
- **funkcja podgrzewania - regulowana temperatura w zakresie od 0 do 80°C**
- częstotliwość ultradźwięków: 40kHz
- **funkcja odgazowywania płynu - DeGas**
- **funkcja pracy przerywanej**
- regulowany czas pracy od 0 do 30 minut co 1s
- wymiary zbiornika: 500 x 300 x 150 mm
- wymiary urządzenia: 530 x 330 x 280mm
- waga: 12kg
- zasilanie: 220-240V AC 50Hz

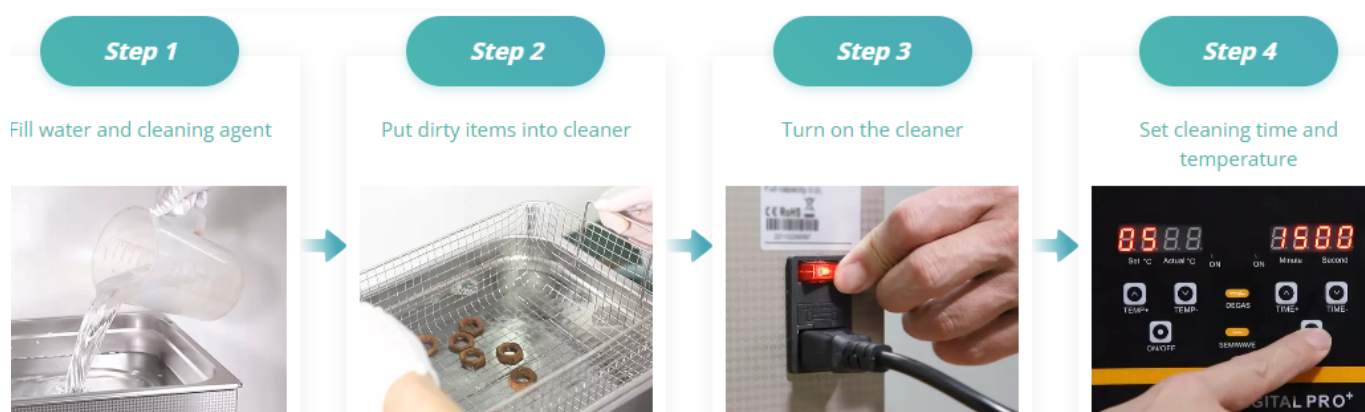

Zestaw zawiera

- 1 x myjka ultradźwiękowa 22L ZX-080T
- 1 x koszyk z metalu SUS304
- 1 x przewód zasilający
- 1 x wąż do odprowadzenia płynu
- 1 x opaska zaciskowa na wąż
- 1 x instrukcja obsługi w języku polskim wewnątrz produktu

Zastosowanie

- mycie pozostałości pasty, topnika po procesie lutowania
- w salonach optycznych i jubilerskich - mycie biżuterii, okularów
- mycie narzędzi do makijażu
- mycie elektroniki - płyty główne, sprzęt komputerowy, lasery optyczne itp.
- części metalowe od maszyn oraz w motoryzacji
- salony dentystyczne
- narzędzia do manicure
- numizmatyka, zastawa stołowa
- oraz wiele innych.



Biżuteria



Okulary



Narzędzia do makijażu



Sprzęt komputerowy



Części metalowe



Proteza



Narzędzia do paznokci



Zastawa stołowa

Najczęściej zadawane pytania

Kiedy należy używać dostarczonego kosza i stojaka?

Bez względu na to, jakie przedmioty chcesz wyczyścić, upewnij się, że są one umieszczone w koszyku, a następnie w myjce ultradźwiękowej, aby uniknąć uszkodzenia przedmiotów w wyniku ocierania się o siebie. Pamiętaj, aby używać podstawki podczas czyszczenia zegarka.

Jak długo należy używać myjki ultradźwiękowej?

Czas pracy myjki ultradźwiękowej zależy od czyszczonego przedmiotu i poziomu zanieczyszczenia. Zazwyczaj czyszczenie biżuterii, okularów i innych małych przedmiotów codziennego użytku można wyczyścić w ciągu 3-5 minut. Sugerujemy, aby najpierw ustawić czas czyszczenia na 2-3 minuty i obserwować sytuację czyszczenia. Jeśli uznasz, że przedmioty są nadal brudne, możesz ustawić dłuższy czas lub powtórzyć mycie.

Jakiego rodzaju roztworu czyszczącego powinienem używać z moją myjką ultradźwiękową?

Rodzaj używanego roztworu czyszczącego zależy od czyszczonego przedmiotu. Na przykład do czyszczenia biżuterii można użyć łagodnego detergentu, podczas gdy do czyszczenia części przemysłowych może być wymagany bardziej wytrzymały rozpuszczalnik. Zawsze należy zapoznać się z instrukcjami producenta lub dostawcy roztworu czyszczącego w celu uzyskania wskazówek.

Jak często należy czyścić myjkę ultradźwiękową?

Regularne czyszczenie myjki ultradźwiękowej jest kluczowe w celu utrzymania jej skuteczności. Częstotliwość czyszczenia zależy od częstotliwości korzystania z myjki i poziomu zanieczyszczenia czyszczonych przedmiotów. Zasadniczo myjkę ultradźwiękową należy czyścić co najmniej raz w miesiącu.

Czy mogę czyścić wiele przedmiotów jednocześnie w myjce ultradźwiękowej?

Tak, można czyścić wiele przedmiotów jednocześnie w myjce ultradźwiękowej, o ile są one kompatybilne z roztworem czyszczącym i nie dotykają się ani nie nakładają na siebie podczas procesu czyszczenia. Ważne jest również, aby upewnić się, że myjka ultradźwiękowa nie jest przeciążona, ponieważ może to zmniejszyć skuteczność procesu czyszczenia.

Co to jest funkcja odgazowywania?

Korzystanie z przerywanego trybu pracy, uruchamianie i zatrzymywanie cyklu ułatwia odprowadzanie powietrza z cieczy, zwiększa penetrację cieczy i utrzymuje zdolność czyszczenia ultradźwiękowego. Funkcja DeGas może zmniejszyć utlenianie przedmiotów w tym samym czasie odkażania.



Zachęcamy do zapoznania się z naszymi artykułami na temat myjek ultradźwiękowych
Zastosowanie myjek ultradźwiękowych -
artykuł











Instruction Manual

Please read the manual before use.

1. Turn on the power.

2. Set the timer.

3. Start the cleaning cycle.

4. Wait for the cycle to complete.

5. Turn off the power.

6. Remove the cleaned items.

7. Clean the basket.

8. Store the cleaner.

9. Contact us for more information.

10. Thank you for your purchase.

11. We hope you enjoy your new ultrasonic cleaner.

12. Best regards,

13. The Manufacturer.

14. Contact: 1-800-123-4567

15. Website: www.ourcompany.com

16. Email: support@ourcompany.com

17. Phone: 1-800-123-4567

18. Fax: 1-800-123-4567

19. Address: 123 Main St, Anytown, USA

20. Zip: 12345

21. Country: USA

22. Language: English

23. Version: 1.0

24. Date: 2023-10-27

25. Page: 1 of 1

26. Copyright: © 2023 Our Company

27. All rights reserved.

28. No part of this manual may be reproduced without the prior written permission of the manufacturer.

29. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

30. Please use common sense and follow all safety instructions.

31. Thank you for your purchase.

32. We hope you enjoy your new ultrasonic cleaner.

33. Best regards,

34. The Manufacturer.

35. Contact: 1-800-123-4567

36. Website: www.ourcompany.com

37. Email: support@ourcompany.com

38. Phone: 1-800-123-4567

39. Fax: 1-800-123-4567

40. Address: 123 Main St, Anytown, USA

41. Zip: 12345

42. Country: USA

43. Language: English

44. Version: 1.0

45. Date: 2023-10-27

46. Page: 1 of 1

47. Copyright: © 2023 Our Company

48. All rights reserved.

49. No part of this manual may be reproduced without the prior written permission of the manufacturer.

50. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

51. Please use common sense and follow all safety instructions.

52. Thank you for your purchase.

53. We hope you enjoy your new ultrasonic cleaner.

54. Best regards,

55. The Manufacturer.

56. Contact: 1-800-123-4567

57. Website: www.ourcompany.com

58. Email: support@ourcompany.com

59. Phone: 1-800-123-4567

60. Fax: 1-800-123-4567

61. Address: 123 Main St, Anytown, USA

62. Zip: 12345

63. Country: USA

64. Language: English

65. Version: 1.0

66. Date: 2023-10-27

67. Page: 1 of 1

68. Copyright: © 2023 Our Company

69. All rights reserved.

70. No part of this manual may be reproduced without the prior written permission of the manufacturer.

71. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

72. Please use common sense and follow all safety instructions.

73. Thank you for your purchase.

74. We hope you enjoy your new ultrasonic cleaner.

75. Best regards,

76. The Manufacturer.

77. Contact: 1-800-123-4567

78. Website: www.ourcompany.com

79. Email: support@ourcompany.com

80. Phone: 1-800-123-4567

81. Fax: 1-800-123-4567

82. Address: 123 Main St, Anytown, USA

83. Zip: 12345

84. Country: USA

85. Language: English

86. Version: 1.0

87. Date: 2023-10-27

88. Page: 1 of 1

89. Copyright: © 2023 Our Company

90. All rights reserved.

91. No part of this manual may be reproduced without the prior written permission of the manufacturer.

92. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

93. Please use common sense and follow all safety instructions.

94. Thank you for your purchase.

95. We hope you enjoy your new ultrasonic cleaner.

96. Best regards,

97. The Manufacturer.

98. Contact: 1-800-123-4567

99. Website: www.ourcompany.com

100. Email: support@ourcompany.com

101. Phone: 1-800-123-4567

102. Fax: 1-800-123-4567

103. Address: 123 Main St, Anytown, USA

104. Zip: 12345

105. Country: USA

106. Language: English

107. Version: 1.0

108. Date: 2023-10-27

109. Page: 1 of 1

110. Copyright: © 2023 Our Company

111. All rights reserved.

112. No part of this manual may be reproduced without the prior written permission of the manufacturer.

113. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

114. Please use common sense and follow all safety instructions.

115. Thank you for your purchase.

116. We hope you enjoy your new ultrasonic cleaner.

117. Best regards,

118. The Manufacturer.

119. Contact: 1-800-123-4567

120. Website: www.ourcompany.com

121. Email: support@ourcompany.com

122. Phone: 1-800-123-4567

123. Fax: 1-800-123-4567

124. Address: 123 Main St, Anytown, USA

125. Zip: 12345

126. Country: USA

127. Language: English

128. Version: 1.0

129. Date: 2023-10-27

130. Page: 1 of 1

131. Copyright: © 2023 Our Company

132. All rights reserved.

133. No part of this manual may be reproduced without the prior written permission of the manufacturer.

134. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

135. Please use common sense and follow all safety instructions.

136. Thank you for your purchase.

137. We hope you enjoy your new ultrasonic cleaner.

138. Best regards,

139. The Manufacturer.

140. Contact: 1-800-123-4567

141. Website: www.ourcompany.com

142. Email: support@ourcompany.com

143. Phone: 1-800-123-4567

144. Fax: 1-800-123-4567

145. Address: 123 Main St, Anytown, USA

146. Zip: 12345

147. Country: USA

148. Language: English

149. Version: 1.0

150. Date: 2023-10-27

151. Page: 1 of 1

152. Copyright: © 2023 Our Company

153. All rights reserved.

154. No part of this manual may be reproduced without the prior written permission of the manufacturer.

155. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

156. Please use common sense and follow all safety instructions.

157. Thank you for your purchase.

158. We hope you enjoy your new ultrasonic cleaner.

159. Best regards,

160. The Manufacturer.

161. Contact: 1-800-123-4567

162. Website: www.ourcompany.com

163. Email: support@ourcompany.com

164. Phone: 1-800-123-4567

165. Fax: 1-800-123-4567

166. Address: 123 Main St, Anytown, USA

167. Zip: 12345

168. Country: USA

169. Language: English

170. Version: 1.0

171. Date: 2023-10-27

172. Page: 1 of 1

173. Copyright: © 2023 Our Company

174. All rights reserved.

175. No part of this manual may be reproduced without the prior written permission of the manufacturer.

176. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

177. Please use common sense and follow all safety instructions.

178. Thank you for your purchase.

179. We hope you enjoy your new ultrasonic cleaner.

180. Best regards,

181. The Manufacturer.

182. Contact: 1-800-123-4567

183. Website: www.ourcompany.com

184. Email: support@ourcompany.com

185. Phone: 1-800-123-4567

186. Fax: 1-800-123-4567

187. Address: 123 Main St, Anytown, USA

188. Zip: 12345

189. Country: USA

190. Language: English

191. Version: 1.0

192. Date: 2023-10-27

193. Page: 1 of 1

194. Copyright: © 2023 Our Company

195. All rights reserved.

196. No part of this manual may be reproduced without the prior written permission of the manufacturer.

197. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

198. Please use common sense and follow all safety instructions.

199. Thank you for your purchase.

200. We hope you enjoy your new ultrasonic cleaner.

201. Best regards,

202. The Manufacturer.

203. Contact: 1-800-123-4567

204. Website: www.ourcompany.com

205. Email: support@ourcompany.com

206. Phone: 1-800-123-4567

207. Fax: 1-800-123-4567

208. Address: 123 Main St, Anytown, USA

209. Zip: 12345

210. Country: USA

211. Language: English

212. Version: 1.0

213. Date: 2023-10-27

214. Page: 1 of 1

215. Copyright: © 2023 Our Company

216. All rights reserved.

217. No part of this manual may be reproduced without the prior written permission of the manufacturer.

218. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

219. Please use common sense and follow all safety instructions.

220. Thank you for your purchase.

221. We hope you enjoy your new ultrasonic cleaner.

222. Best regards,

223. The Manufacturer.

224. Contact: 1-800-123-4567

225. Website: www.ourcompany.com

226. Email: support@ourcompany.com

227. Phone: 1-800-123-4567

228. Fax: 1-800-123-4567

229. Address: 123 Main St, Anytown, USA

230. Zip: 12345

231. Country: USA

232. Language: English

233. Version: 1.0

234. Date: 2023-10-27

235. Page: 1 of 1

236. Copyright: © 2023 Our Company

237. All rights reserved.

238. No part of this manual may be reproduced without the prior written permission of the manufacturer.

239. The manufacturer assumes no responsibility for any damage or injury caused by the use of this product.

240. Please use common sense and follow all safety instructions.

241. Thank you for your purchase.

242. We hope you enjoy your new ultrasonic cleaner.

243. Best regards,

244. The Manufacturer.

245. Contact: 1-800-123-4567

246. Website: www.ourcompany.com

247. Email: support@ourcompany.com

248. Phone: 1-800-123-4567

249. Fax: 1-800-123-4567

250. Address: 123 Main St, Anytown, USA

251. Zip: 12345

252. Country: USA

253. Language: English

254. Version: 1.0

255. Date: 2023-10-27

256. Page: 1 of 1

257. Copyright: © 2023 Our Company

258

